


Visit
DANCO.COM
for Additional D.I.Y. Solutions

Instructions

Tools Required: Plumber's Putty

1. Unthread Shank Nut (A) and Putty Cup (B) from Faucet Hole Cover (C).
2. Roll Plumber's Putty into a rope bead about 3/8" in diameter. Place under rim of Faucet Hole Cover (C) with ends overlapping. Place a similar rope bead on top of Putty Cup (B) with ends overlapping.
3. Insert Faucet Hole Cover Shank (D) into hole in deck of sink.
4. Slide Putty Cup (B) onto Shank (D). Screw Shank Nut (A) onto Shank (D) hand tight. Do not over tighten.

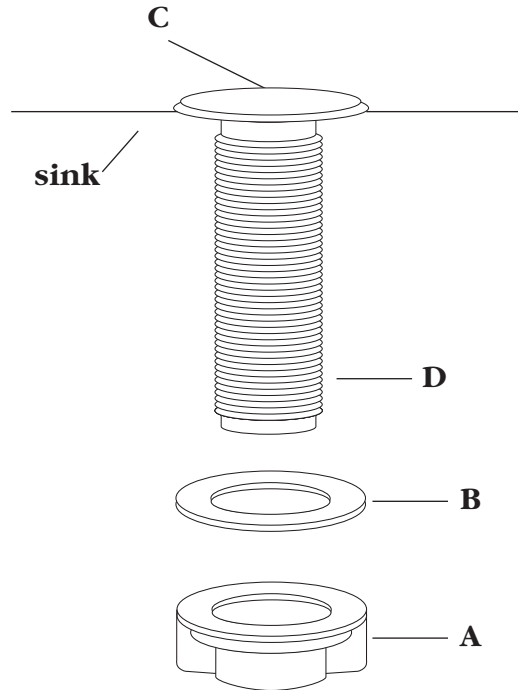

Instrucciones

Herramientas Necesarias: Masilla de Plomero

1. Retira la Tuerca del Vástago (A) y el Platillo (B) de la Tapa del Orificio del Grifo (C).
2. Forma una tira circular de aproximadamente 95 mm con Masilla de Plomero. Aplica la tira debajo del borde de la Tapa del Orificio del Grifo (C) y une sus puntas. Coloca una tira similar en el lado posterior del Platillo (B), con las puntas sobrepuestas.
3. Inserta el Vástago de la Tapa del Orificio del Grifo (D) en el orificio de la cubierta del lavamanos.
4. Desliza el Platillo (B) sobre el Vástago (D). Enrosca la Tuerca del Vástago (A) en el Vástago (D) y aprieta con la mano. No aprietes demasiado.

©2013 Danco, Inc
Irving, TX 75062
Made in China/Hecho en China
10688