




Instructions for Product Closet Flange Extension Kit No. 86882

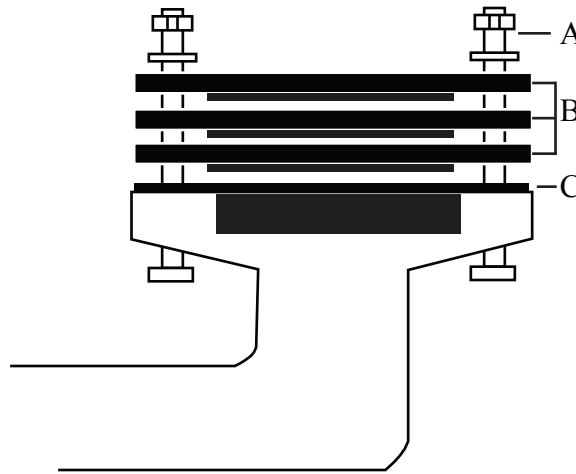

Instructions

Tools required: Adjustable Wrench, Adjustable Pliers, Putty Knife, Silicone Sealer

1. Replace existing closet bolts with new 3 1/2" Bolts (A).
2. Apply 3/8" bead of silicone sealer to the top of existing Floor Flange (C). Stack Extenders (B) to the desired height with flange lip down. Apply silicone sealer between each Extender (B) next to flange lip as you stack.
3. Place the wax ring on top of the extenders and install the toilet.

Caution: Do Not Over Tighten Closet Bolts.