



TUB/SHOWER REMODELING KIT for American Standard® Colony

JUEGO DE RENOVACIÓN DE LLAVE DE TINA/DUCHA PARA AMERICAN STANDARD® COLONY

Visit
DANCO.COM
for Easy D.I.Y. Solutions

Kit Contains:

- 2 Hot/Cold Stems (9C-23H/C)
- 1 Diverter Stem (11C-1D)
- 2 Faucet Seats (1/2" x 20 Thd)
- 3 Handles
- 3 Flanges with Sleeves
- Stem Removal Tool

El Juego Contiene:

- 2 Vástago caliente/frío (9C-23H/C)
- 1 Vástago desviador (11C-1D)
- 2 Asientos (1/2" x 20 Thd)
- 3 Manijas
- 3 Bridas y Tubo con Brida
- Herramienta para Extracción del Vástago

Additional Tools Required:

Screwdriver, Seat Wrench, Adjustable Wrench

Herramientas Adicionales Necesarias:

Destornillador, Llave Inglesa, Llave Ajustable


Instructions

Removal of Old Parts

1. Turn off water supply to tub faucet.
2. Remove screw (A) and lift off handle (B).
3. Remove tube (C) by unthreading. Remove old flange (D).
4. Repeat Steps 2 & 3 for COLD and DIVERTER handles.
5. Unscrew HOT stem (E), using stem removal tool (supplied). Repeat for COLD and DIVERTER valve stems.
6. Insert seat wrench into faucet and turn counterclockwise to remove old seats (F).
7. Discard all old parts.

Installation of New Parts

1. Place new seat (F) into faucet body and tighten with seat wrench. **Do not over-tighten.** Repeat for other seat.
2. Install new faucet stem (E) by threading into faucet body. **Do not overtighten.** Turn on water supply to tub faucet and check for leaks.
3. Install new flange (D). Install new tube (C) by threading onto stem (E) and tightening to wall.
4. Replace handle (B), securing with screw (A).
5. Repeat for COLD and DIVERTER valve stems.
6. Turn on tub faucet. Check for leaks.

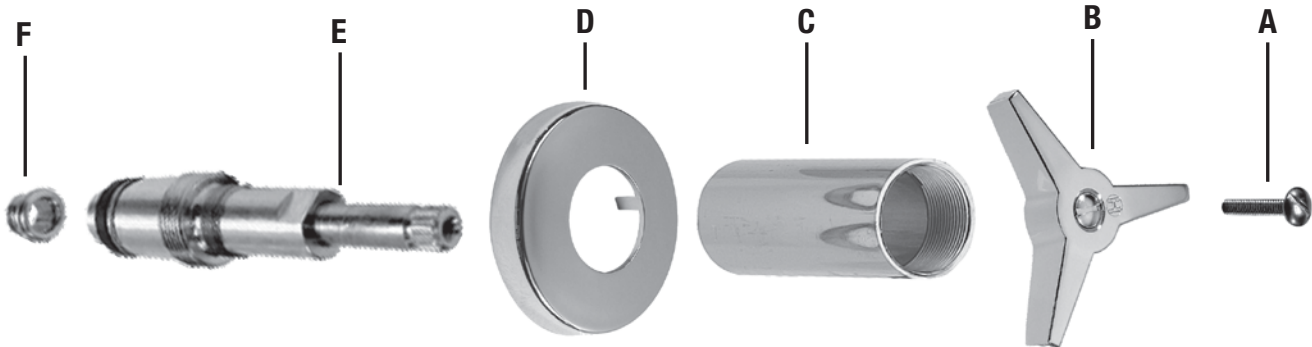

Instrucciones

Extracción de las piezas antiguas

1. Desconecte el suministro de agua para la canilla de la bañera.
2. Quitar el tornillo (A) y sacar la manija (B).
3. Desenrosque y retire la tubo anterior (C). Retire la brida usada (D).
4. Repita los pasos 2 y 3 para las manijas FRÍO y DISPOSITIVO DESVIADOR.
5. Desatornille el vástago CALIENTE (E) con la llave de tubo (suministrada). Repita los pasos para los vástagos de las válvulas FRÍO y DISPOSITIVO DESVIADOR.
6. Inserte la llave inglesa en la canilla y gire en sentido contrario a las agujas del reloj para sacar los asientos anteriores (F).
7. Deseche todas las piezas anteriores.

Instalación de las piezas nuevas

1. Coloque el nuevo asiento (F) en la estructura de la canilla y ajuste. **No ajuste en exceso.** Repita para el otro asiento.
2. Instale los nuevos vástago de la canilla (E) enroscando en la estructura de la canilla. No ajuste en exceso. Conecte el suministro de agua a la canilla de la bañera y verifique que no haya filtraciones.
3. Instale la nueva brida (D). Instale la tubo nuevo (C) enroscando la vástago (E) y afianzando a la pared.
4. Coloque la manija (B) con el tornillo de la manija (A).
5. Repita los pasos para los vástagos de las válvulas FRÍO y DISPOSITIVO DESVIADOR.
6. Abra la canilla de la bañera. Verifique que no haya filtraciones.